
BookletChartTM

NOAR NOLLAND ATMOSPHERIC ROMMINISTRATION JOHN NOLLAND ATMOSPHERIC ROMMINISTRATION JOHN ARTIMENT OF COMMINISTRATION JOHN ARTIMENT OF COMMINISTRATION AND ARTIMENT A


San Joaquin River – Medford Island to Stockton

NOAA Chart 18663

A reduced-scale NOAA nautical chart for small boaters When possible, use the full-size NOAA chart for navigation.

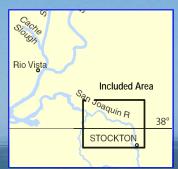

- Complete, reduced-scale nautical chart
- Print at home for free
- Convenient size
- Up-to-date with Notices to Mariners
- Compiled by NOAA's Office of Coast Survey, the nation's chartmaker

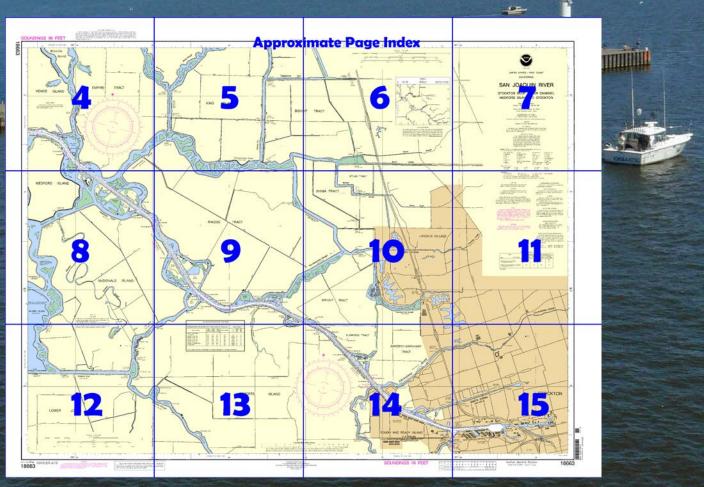

Published by the National Oceanic and Atmospheric Administration National Ocean Service Office of Coast Survey

<u>www.NauticalCharts.NOAA.gov</u> 888-990-NOAA

What are Nautical Charts?

Nautical charts are a fundamental tool of marine navigation. They show water depths, obstructions, buoys, other aids to navigation, and much more. The information is shown in a way that promotes safe and efficient navigation. Chart carriage is mandatory on the commercial ships that carry America's commerce. They are also used on every Navy and Coast Guard ship, fishing and passenger vessels, and are widely carried by recreational boaters.

What is a BookletChart[™]?

This BookletChart is made to help recreational boaters locate themselves on the water. It has been reduced in scale for convenience, but otherwise contains all the information of the full-scale nautical chart. The bar scales have also been reduced, and are accurate when used to measure distances in this BookletChart. See the Note at the bottom of page 5 for the reduction in scale applied to this chart.


Whenever possible, use the official, full scale NOAA nautical chart for navigation. Nautical chart sales agents are listed on the Internet at http://www.NauticalCharts.NOAA.gov.

This BookletChart does NOT fulfill chart carriage requirements for regulated commercial vessels under Titles 33 and 44 of the Code of Federal Regulations.

Notice to Mariners Correction Status

This BookletChart has been updated for chart corrections published in the U.S. Coast Guard Local Notice to Mariners, the National Geospatial Intelligence Agency Weekly Notice to Mariners, and, where applicable, the Canadian Coast Guard Notice to Mariners. Additional chart corrections have been made by NOAA in advance of their publication in a Notice to Mariners. The last Notices to Mariners applied to this chart are listed in the Note at the bottom of page 7. Coast Pilot excerpts are not being corrected.

For latest Coast Pilot excerpt visit the Office of Coast Survey website at http://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=18663.

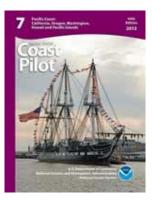

(Selected Excerpts from Coast Pilot)
San Joaquin River rises in the Sierra
Nevada, flows 275 miles in a W direction, and enters Suisun Bay through New York
Slough. The winding river is navigable for deep-draft vessels to Stockton. The water is generally fresh at Antioch.
Major floods in the river valley may occur from November to April, caused by intense general storms of several days' duration. At the mouth of the river an ordinary flood will cause a rise of 8 feet and an extreme flood a rise of 10 feet in

the river level. At Stockton, ordinary flood will cause a rise of 8.5 feet, and extreme flood a rise of 13.5 feet in the river level. The delta of the

river is formed of many marshy islands intersected by sloughs and channels. The islands are reclaimed tule and cattail marshes which have been converted to agriculture. Bordering the river are levees that are 12 feet or more higher than the land behind them.

Reports of gage heights of the San Joaquin River delta can be obtained from the Sacramento National Weather Service Office at any time. The information is published in the Sacramento Bee and, in addition, is reported on radio broadcasts from station KFBK (1530 kHz) whenever the gage heights are sufficient to be of general interest.

Information on gage heights can also be obtained from the State Department of Water Resources, 1416 9th Street, Sacramento, CA 95814 or by recorded message at (916) 653-6416.

A **Federal project** provides for a 35-foot channel from the mouth of the San Joaquin River to a turning basin at Stockton, and for suitable passing and turning basins. (See Notice to Mariners and latest editions of charts for controlling depths.)

Anchorages.—General and explosives anchorages are in the San Joaquin River on the W side of Sherman Island near the mouth, and just N of Venice Cut between Mandeville Island and Venice Island. (See 110.1 and 110.224, chapter 2, for limits and regulations.)

(See **162.205**, chapter 2, for rules and regulations governing maximum speed, passing, right-of-way, collision, and wrecks in the San Joaquin River.)

Antioch Bridge, (State Route 160), a fixed highway bridge with a clearance of 142 feet, crosses San Joaquin River about 3 miles E of Antioch. There are no other bridges over the main channel below the turning basin at Stockton. Power cables over the main channel of San Joaquin River from the mouth to the turning basin at Stockton have a minimum clearance of 140 feet.

There are small-craft facilities on the S side of San Joaquin River on both sides of Antioch Bridge. (See the small-craft facilities tabulation on chart 18661 for services and supplies available.)

The main channel in San Joaquin River to Stockton is marked by a daybeacon, buoys, lights, and lighted ranges. At **Mandeville Cut** and **Venice Cut**, 15 miles above Antioch Bridge, the river still follows its old channel and violent sheers are experienced if the navigator is not prepared to meet the river current when passing from the cuts into the river and from the river into the relatively quiet waters of the dredged channel. Under freshet conditions, vessels tend to sheer off course at the junction of the San Joaquin River and the main ship channel at Channel Point near Stockton.

Stockton, 28 miles above Antioch Bridge, is in the center of the fertile San Joaquin Valley. The deep-draft harbor is near the W city limits. **Pilotage, San Joaquin River.**—River pilots, commissioned by the Port of Stockton, are obtained by ship's agents, through the office of the Port of Stockton, or the San Francisco Bar Pilots.

Quarantine, customs, immigration, and agricultural quarantine.—(See chapter 3, Vessel Arrival Inspections, and Appendix A for addresses.) **Quarantine** is enforced in accordance with regulations of the U.S. Public Health Service. (See Public Health Service, chapter 1.)

Supplies.—Supplies may be had in any quantity, and water is piped to the wharves. Ships may fuel from barges; alongside bunkering of large vessels may be done at the oil terminals in San Pablo Bay and Carquinez Strait.

U.S. Coast Guard Rescue Coordination Center 24 hour Regional Contact for Emergencies

RCC Alameda

Commander 11th CG District Alameda, CA

(510) 437-3700

2

Corrected through NM Apr. 01/06 Corrected through LNM Mar. 21/06

HEIGHTS

Heights in feet above Mean High Water.

CABLE FERRY

Cable across the river may be at or near the water surface. Mariners should exercise caution when navigating in this area.

Improved channels shown by broken lines are subject to shoaling, particularly at the edges.

CAUTION

Temporary changes or defects in aids to navigation are not indicated on this chart. See

POLLUTION REPORTS

Report all spills of oil and hazardous sub-stances to the National Response Center via 1-800-424-8502 (toll free), or to the nearest U.S. Coast Guard facility if telephone communication is impossible (33 CFR 153).

HORIZONTAL DATUM

The horizontal reference datum of this chart The horizontal reference datum of this chart is North American Datum of 1993 (NAD 83), which for charting purposes is considered equivalent to the World Geodetic System 1984 (WGS 84). Geographic positions referred to the North American Datum of 1927 must be corrected an average of 0.260 southward and 3.818' westward to agree with this chart.

CAUTION

Small craft should stay clear of large com-mercial and government vessels even if small craft have the right-of-way. All craft should avoid areas where the skin divers flag, a red square with a diagonal white stripe, is displayed.

NOAA WEATHER RADIO BROADCASTS

The NOAA Weather Radio stations listed below provide continuous weather broadcasts. The reception range is typically 20 to 40 nautical miles from the antenna site, but can be as much as 100 nautical miles for stations at high elevations.

Mt. Pise, CA KHB-49 162.40 MHz WX2 Sacramento, CA KEC-57 162.55 MHz WX1

AIDS TO NAVIGATION

Consult U.S. Coast Guard Light List for oplemental information concerning aids to navigation.

NOTE B

CAUTION

Mariners are warred that numerous uncharted piles, snags, pumps, pipes, and wrecks, some submerged, may exist along the edges of the waterway.

The depths shown in backwaters, sloughs and cuts are from surveys of 1934. Channels are not maintained by the Corps of Engineers and numerous uncharted shoals and obstructions have been reported. Use chart 18661.

The prudent mariner will not rely solely on any single aid navigation, particularly on floating aids. See U.S. Coasuard Light List and U.S. Coast Pilot for details.

NOTE A

Navigation regulations are published in Chapter 2, U.S.
Coast Pilot 7. Additions or revisions to Chapter 2 are published in the Notice to Mariners. Information concerning the
regulations may be obtained at the Office of the Commander,
11th Coast Guard District in Alameda, California or at the office of the District Engineer, Corps of Engineers in

Refer to charted regulation section numbers

BRIDGE AND OVERHEAD CABLE CLEARANCES

Clearances are charted as furnished by the Corps of ngineers and U.S. Coast Guard. Overhead cable clearances are referred to high water. Bridge clearances are referred to High Water (HW) and Low Water (LW).

SOURCE DIAGRAM

The outlined areas represent the limits of the most recent hydrographic survey information that has been evaluated for charting. Surveys have been banded in this diagram by date and type of survey. Channels maintained by the U.S. Army Corps of Engineers are periodically resurveyed and are not shown on this diagram. Refer to Chapter 1, United States Coast Pilot.

Hydrography and topography by the National Ocean Service, Coas Survey, with additional data from the Corps of Engineers, Geologica Survey, and U.S. Coast Guard.

Table of Selected Chart Notes


ABBREVIATIONS (For complete list of Symbols and Abbreviations, see Chart No. 1.)
Aids to Navigation (lights are white unless otherwise indicated): AERO aeronautical IQ interrupted quick Al alternating N nun OBSC obscured Rot rotating B black Bn beacon Iso isophase LT HO lighthouse s seconds SEC sector Oc occulting Or orange M nautical mile St M statute miles DIA diaphone m minutes MICRO TR microwave tower Q quick R red VQ very quick W white FI flashing Ra Ref radar reflector WHIS whistle Co coral Blds boulders gy gray h hard Oys oysters Rk rock bk broken Cy clay G gravel Grs grass S sand sy sticky AUTH authorized Obstn obstruction PA position approximate PD position doubtful Subm submerged ED existence doubtful 21. Wreck, rock, obstruction, or shoal swept clear to the depth indicated.
(2) Rocks that cover and uncover, with heights in feet above datum of soundings.

ans chart wor an sourmanne piperimes and som-marine cables are required to be buried, and those that were originally buried may have become exposed. Mariners should use extreme caution when operating vessels in depths of water comparable to their draft in areas where pipelines and cables may exist, and when anchoring, draggling, or trawling. Covered wells may be marked by lighted or unlighted buoys. TIDAL INFORMATION Place Height referred to datum of soundings (MLLW)


TABULATED FROM SU	IRVEYS BY TI	HE CORPS	OF ENGIN	JEERS - SURVEYS T	O AUG 2007		
CONTROLLING DEPTHS FROM SEAWARD IN FEET AT MEAN LOWER LOW WATER (MLLW)					PROJECT DIMENSIONS		
NAME OF CHANNEL	LEFT OUTSIDE QUARTER	MIDDLE HALF OF CHANNEL	RIGHT OUTSIDE QUARTER	DATE OF SURVEY	WIDTH (FEET)	LENGTH (NAUT. MILES)	DEPTH MLLW (FEET)
LIGHT 2 (CHART 18661)							
TO LIGHT 6	34.0	35.3	35.4	8-07	225	1.5	35
THENCE TO LIGHT 16	33.3	33.3	31.8	8-07	225-250	2.8	35
THENCE TO LIGHT 24	31.5	32.3	32.6	8-07	225-250	2.1	35
THENCE TO LIGHT 34	32.0	32.7	31.4	8-07	250	1.5	35
THENCE TO LIGHT 43	31.0	32.3	30.4	8-07	200-250	3.4	35
THENCE TO LIGHT 48	28.9	31.1	31.1	8-07	225-250	1.1	35
THENCE TO TURNING BASIN	28.7	34.2	33.3	8-07	225-250	0.8	35
TURNING BASIN	25.1	26.6	25.9	8-07	225-975	0.3	35


PRINT-ON-DEMAND CHARTS


NOAA and its partner, OceanGrafix, offer this chart updated weekly by NOAA for Notices to Mariners and critical corrections. Charts are printed when ordered using Print-on-Demand technology. New Editions are available 5-8 weeks before their release as traditional NOAA charts. Ask your chart agent about Print-on-Demand charts or contact NOAA at 1-800-584-4683, http://NauticalCharts.gov, help@NauticalCharts.gov, or OceanGrafix at 1-877-58CHART, http://OceanGrafix.com, or help@OceanGrafix.com.

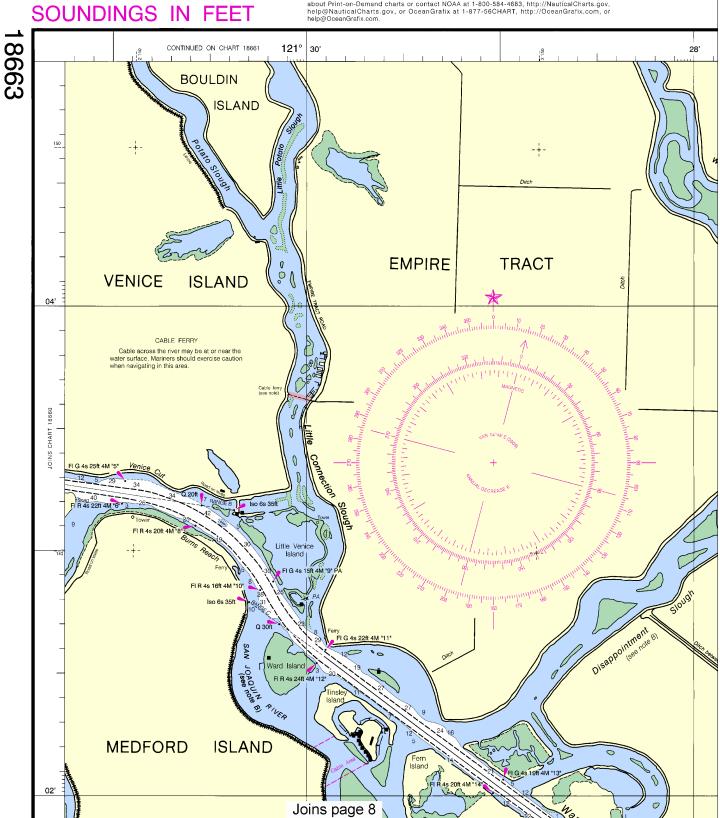





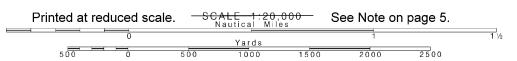


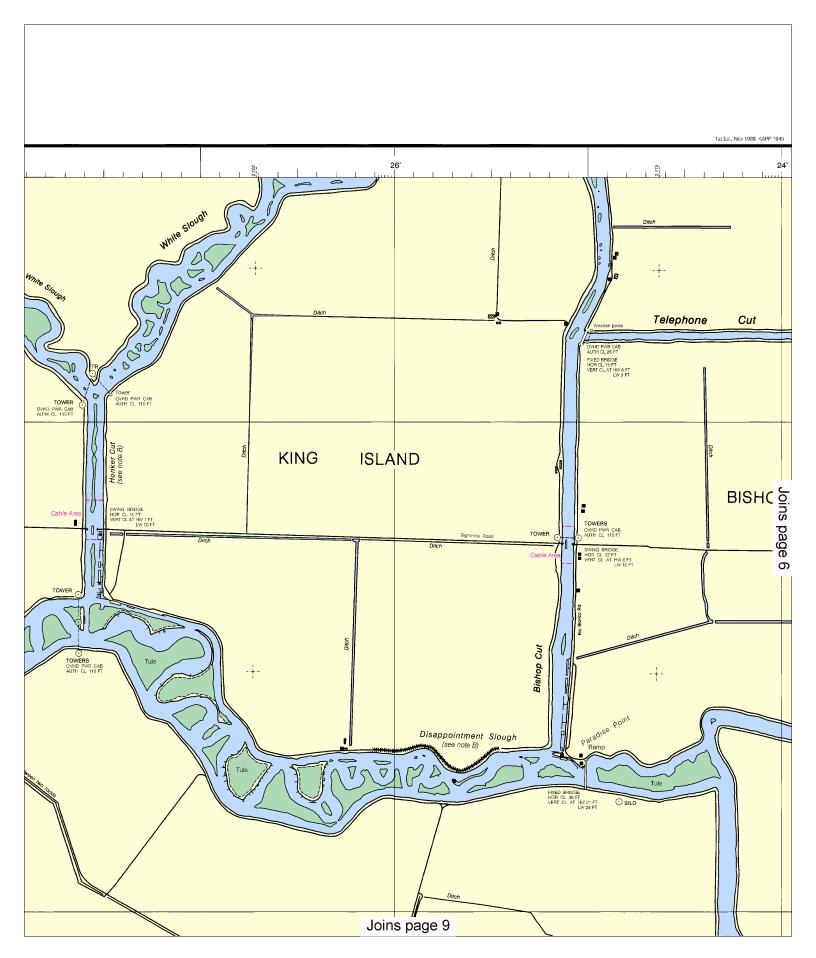


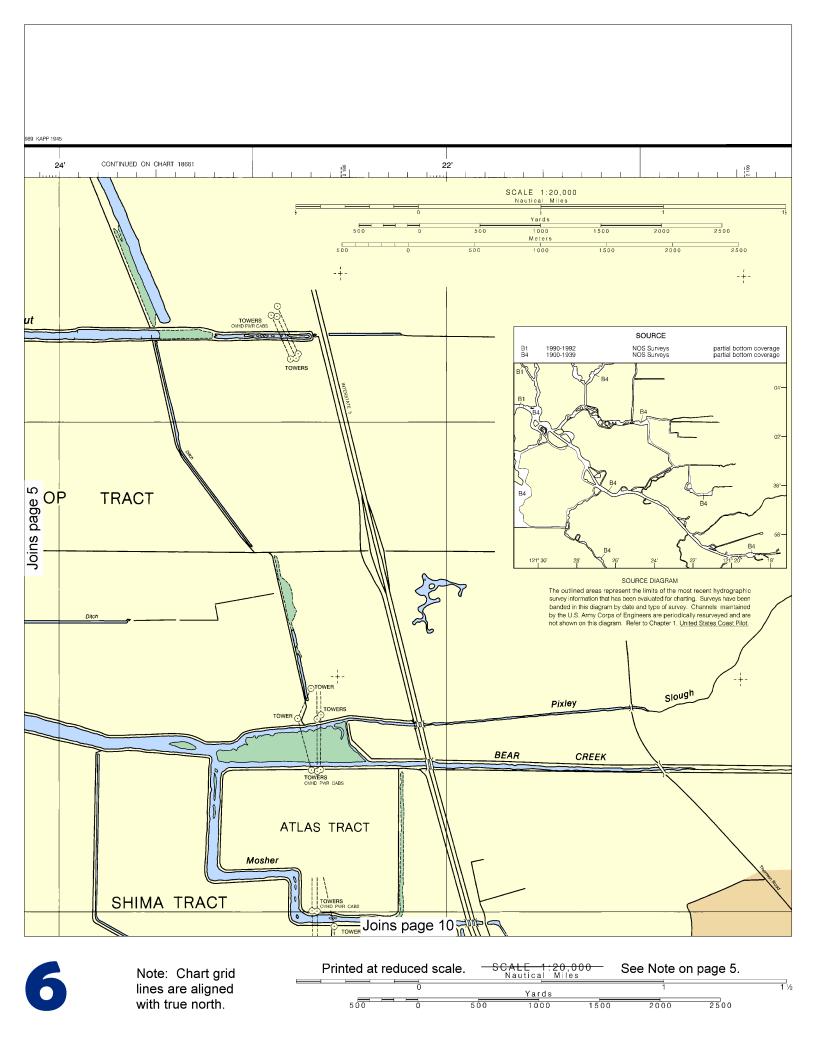


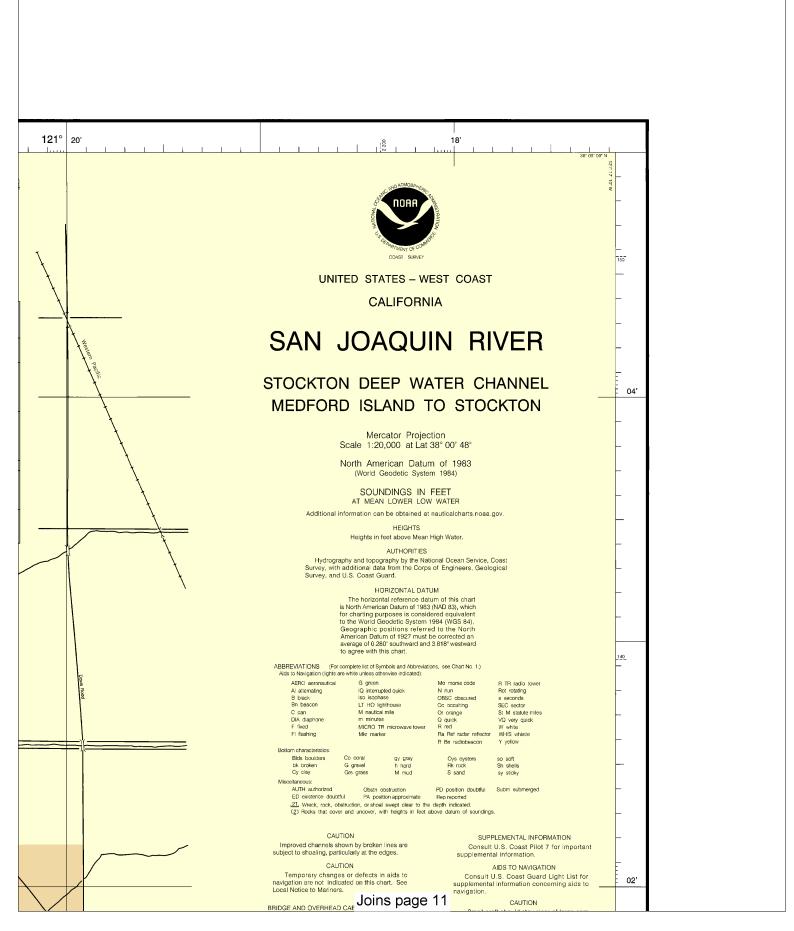

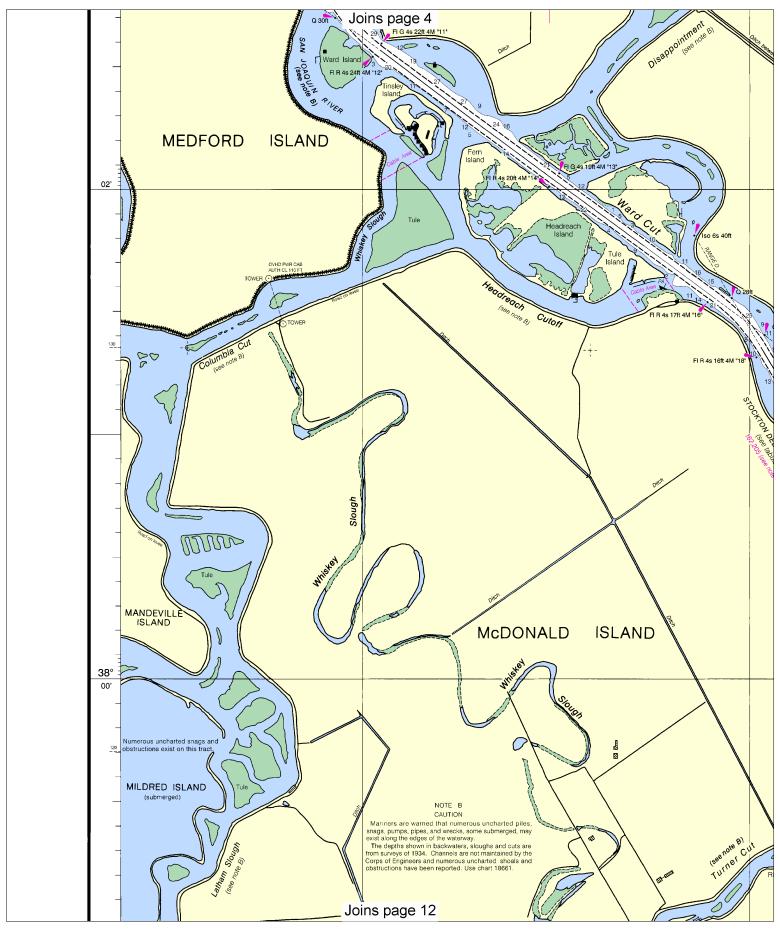


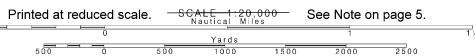


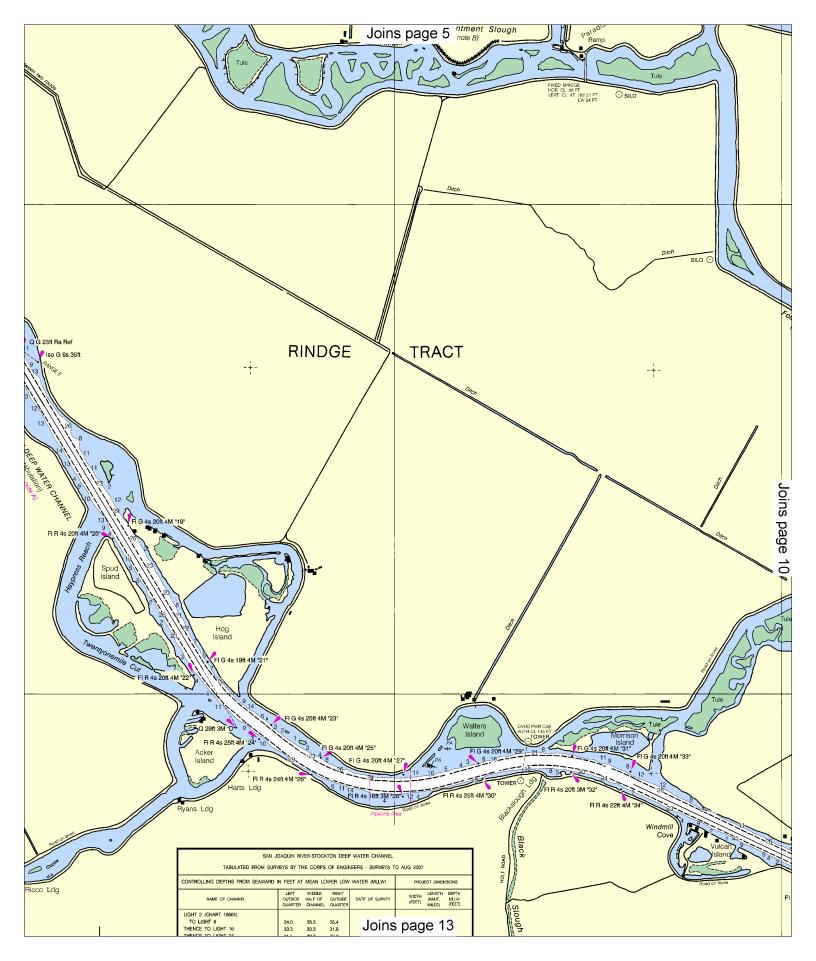

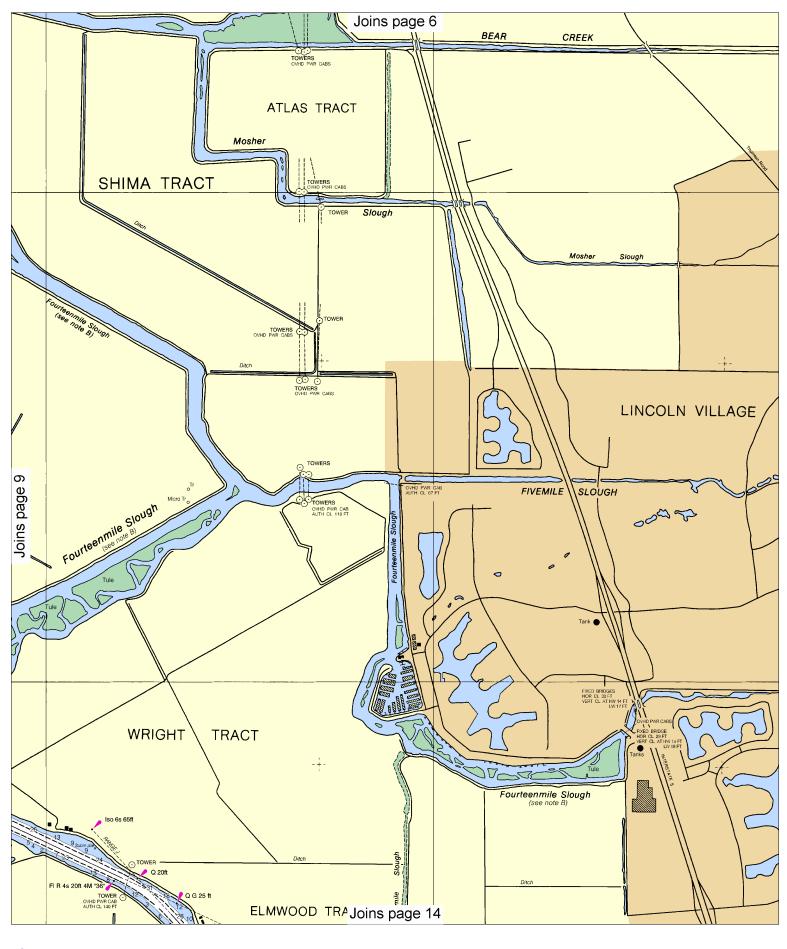





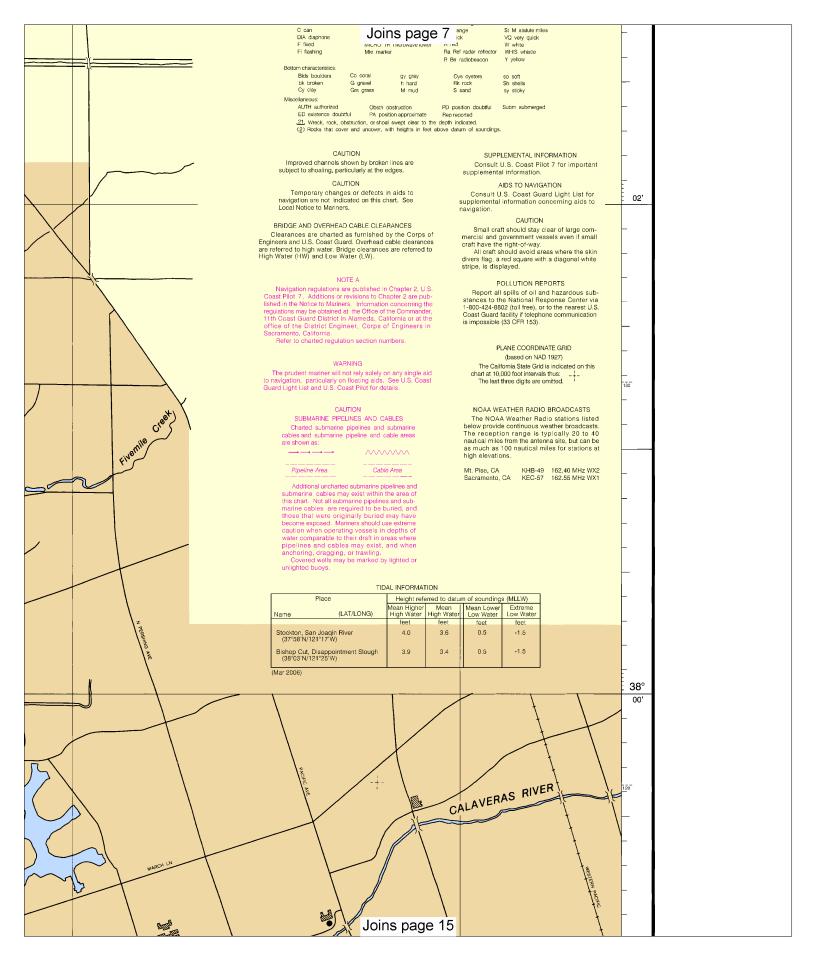

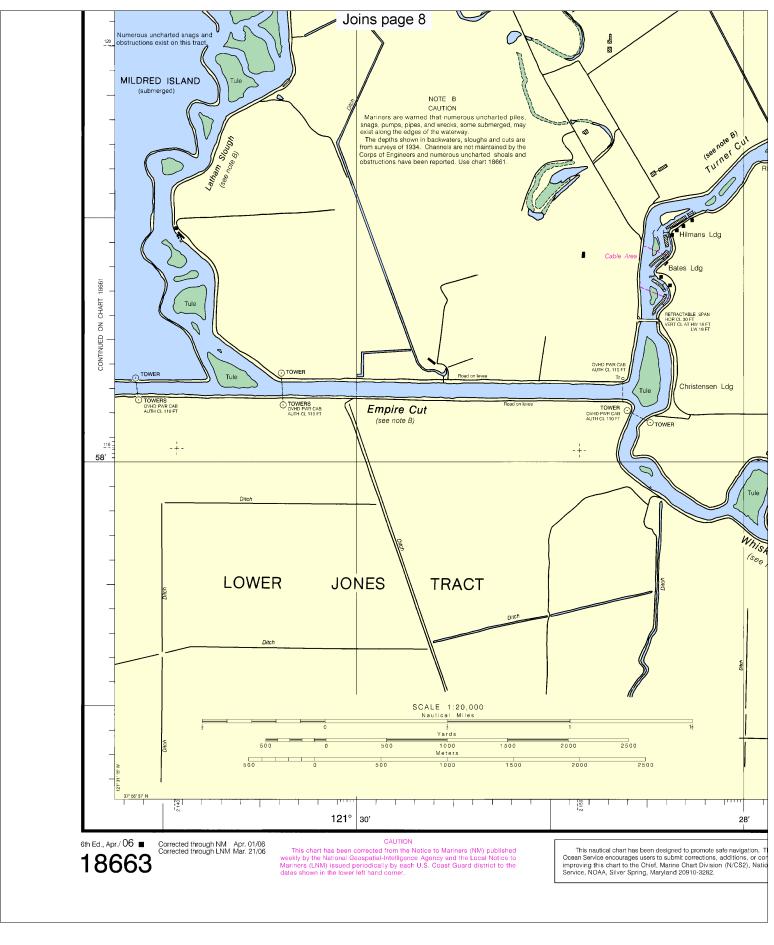




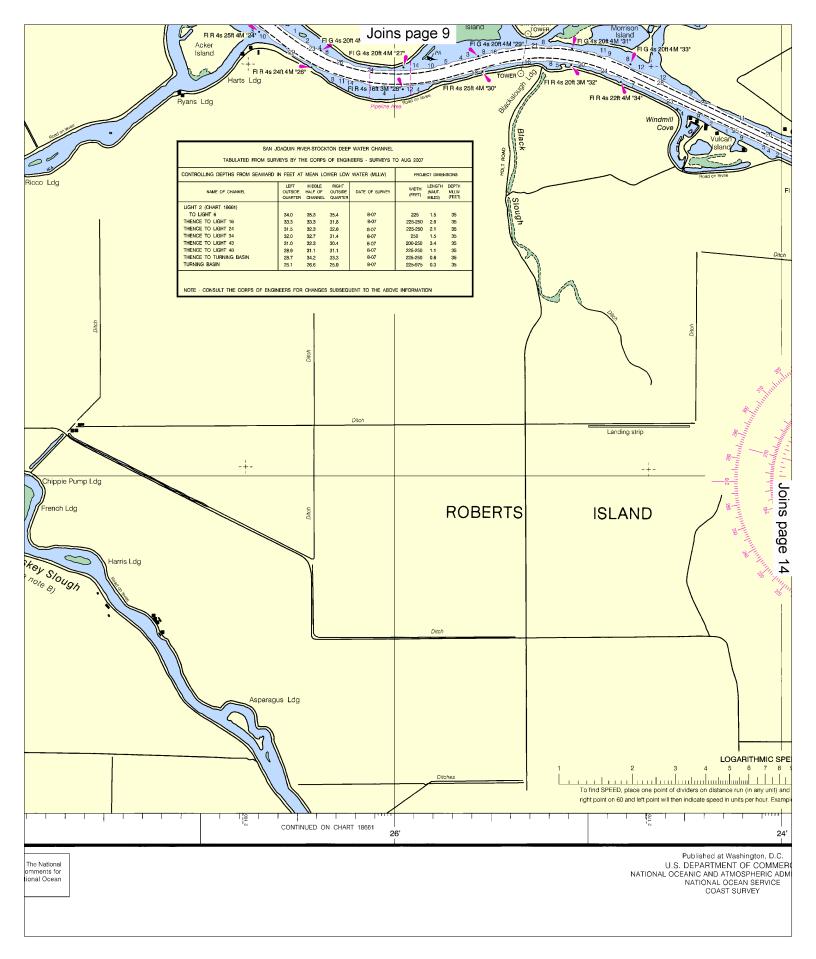

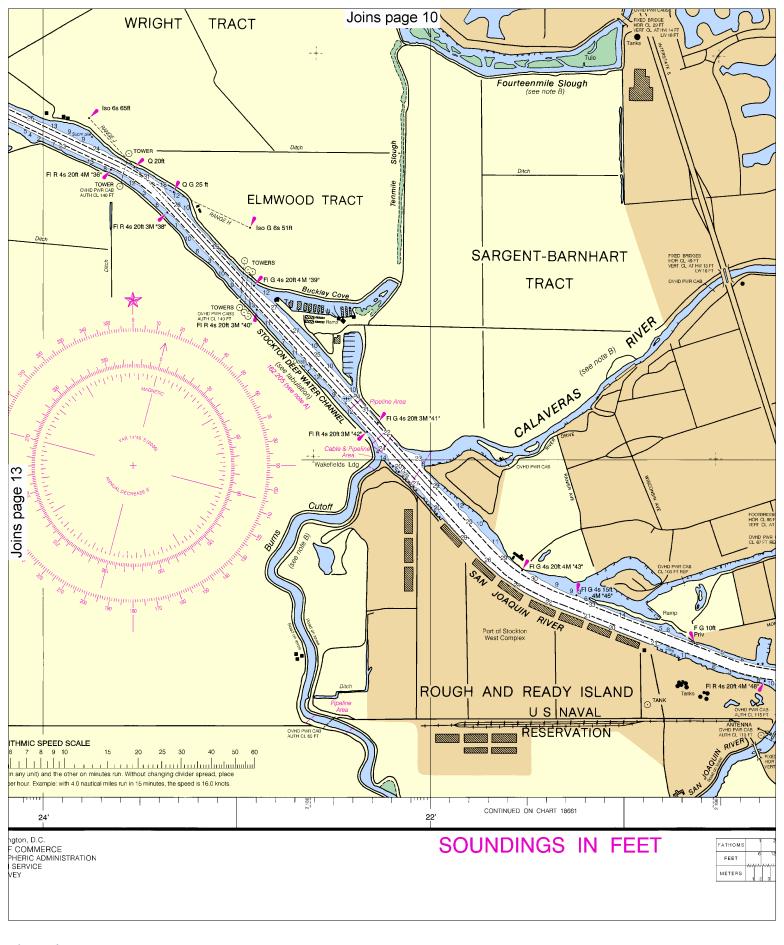



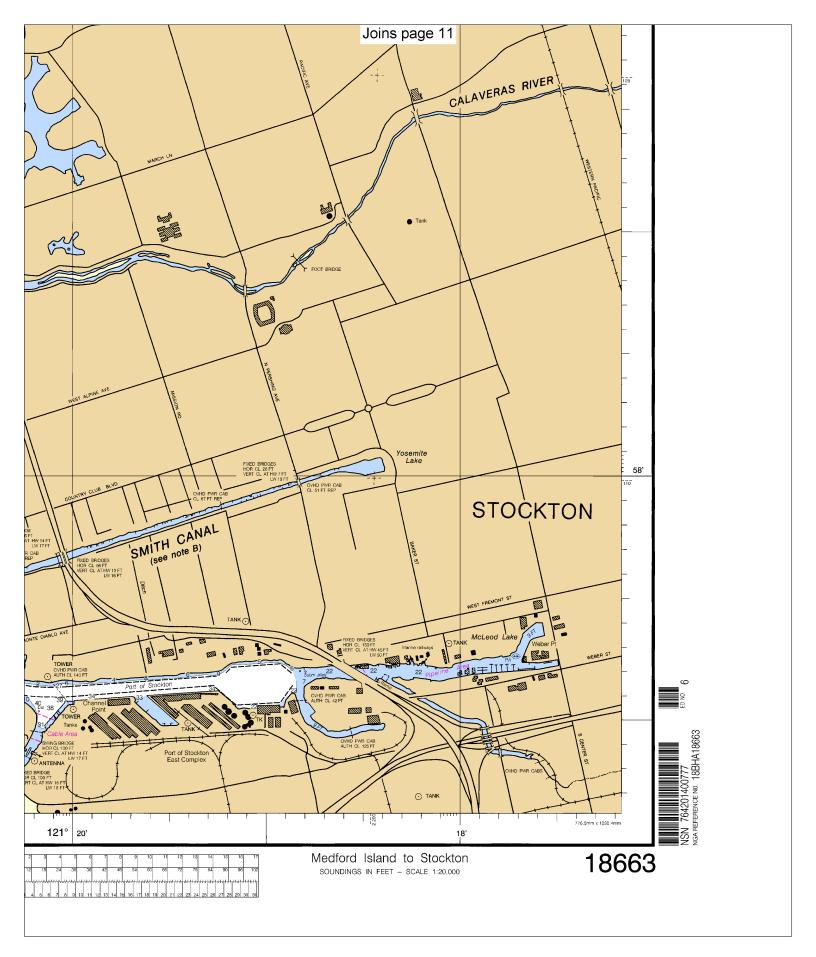



VHF Marine Radio channels for use on the waterways:

Channel 6 – Inter-ship safety communications.

Channel 9 – Communications between boats and ship-to-coast.

Channel 13 – Navigation purposes at bridges, locks, and harbors.

Channel 16 – Emergency, distress and safety calls to Coast Guard and others, and to initiate calls to other

vessels. Contact the other vessel, agree to another channel, and then switch.

Channel 22A – Calls between the Coast Guard and the public. Severe weather warnings, hazards to navigation and safety warnings are broadcast here. Channels 68, 69, 71, 72 and 78A – Recreational boat channels.

Getting and Giving Help — Signal other boaters using visual distress signals (flares, orange flag, lights, arm signals); whistles; horns; and on your VHF radio. You are required by law to help boaters in trouble. Respond to distress signals, but do not endanger yourself.

Distress Call Procedures

- Make sure radio is on.
- Select Channel 16.
- Press/Hold the transmit button.
- Clearly say: "MAYDAY, MAYDAY, MAYDAY."
- Also give: Vessel Name and/or Description; Position and/or Location; Nature of

Emergency; Number of People on Board.

- · Release transmit button.
- Wait for 10 seconds If no response Repeat MAYDAY call.

HAVE ALL PERSONS PUT ON LIFE JACKETS!



NOAA Weather Radio All Hazards (NWR) is a nationwide network of radio stations broadcasting continuous weather information directly from the nearest National Weather Service office. NWR broadcasts official Weather Service warnings, watches, forecasts and other hazard information 24 hours a day, 7 days a week.

http://www.nws.noaa.gov/nwr/

Quick References

Nautical chart related products and information — http://www.nauticalcharts.noaa.gov

Online chart viewer — http://www.nauticalcharts.noaa.gov/mcd/NOAAChartViewer.html

Report a chart discrepancy — http://ocsdata.ncd.noaa.gov/idrs/discrepancy.aspx

Chart and chart related inquiries and comments — http://ocsdata.ncd.noaa.gov/idrs/inquiry.aspx?frompage=ContactUs

Chart updates (LNM and NM corrections) — http://www.nauticalcharts.noaa.gov/mcd/updates/LNM_NM.html

Coast Pilot online — http://www.nauticalcharts.noaa.gov/nsd/cpdownload.htm

Tides and Currents — http://tidesandcurrents.noaa.gov

Marine Forecasts — http://www.nws.noaa.gov/om/marine/home.htm

National Data Buoy Center — http://www.ndbc.noaa.gov/

NowCoast web portal for coastal conditions — http://www.nowcoast.noaa.gov/

National Weather Service — http://www.weather.gov/

National Hurrican Center — http://www.nhc.noaa.gov/

Pacific Tsunami Warning Center — http://ptwc.weather.gov/

Contact Us — http://www.nauticalcharts.noaa.gov/staff/contact.htm



For the latest news from Coast Survey, follow @nauticalcharts



This Booklet chart has been designed for duplex printing (printed on front and back of one sheet). If a duplex option is not available on your printer, you may print each sheet and arrange them back-to-back to allow for the proper layout when viewing.

